


### STRAPPING TAPES ORBIT & DRACO

To create an optimal firmness of the welded straps, please sew below (resp. above the lower weldseam) the welded edge of the straps at a distance of minimum 5 mm. The final hold of the straps can only be guaranteed after sewing. Please be aware that you shouldn't sew over the weldseam, as your sewing needle might break.

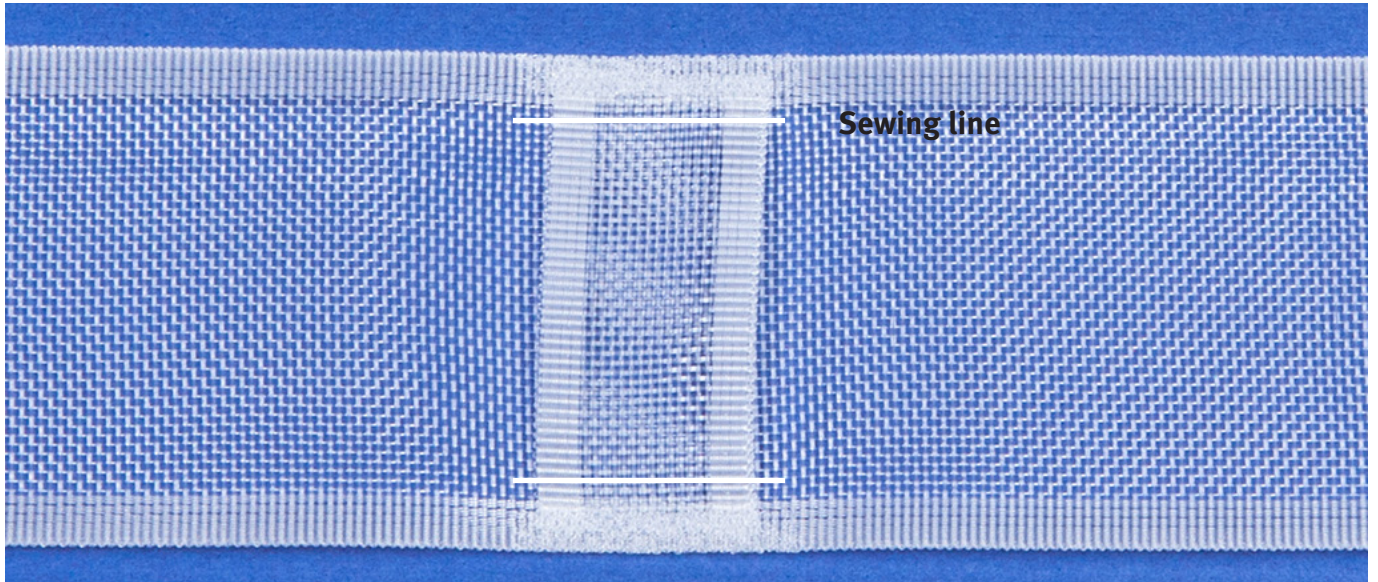

By using our different strapping tapes you can create a modern and easy to sew window decoration, that is simple and uncomplicated to fit on curtain rods. As the straps are welded, the curtain rod can easily be pulled through, without being stuck.

